


Film-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.

If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

www.film-tech.com

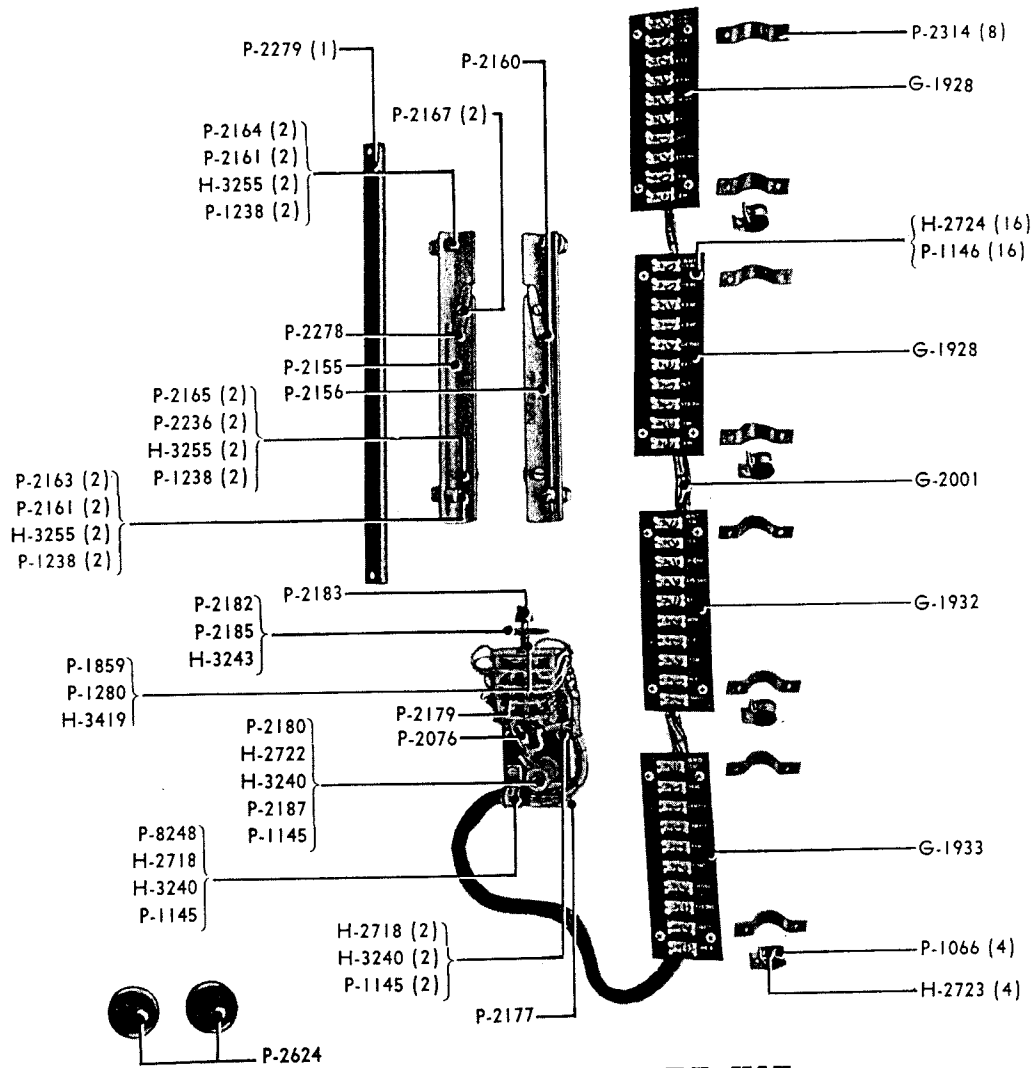

AM-1033 CABINET KIT

- | | | | |
|----------|---|--------|--|
| G-1928 | Power Amplifier Terminal Strip (2) | P-1859 | Switch Fastening Nut |
| G-1932 | Network Terminal Strip | P-2076 | Resistor, 0.1 Meg., 2 watt |
| G-1933 | Power Unit Terminal Strip | P-2155 | Left Chassis Slide |
| G-2001 | Cable Form | P-2156 | Right Chassis Slide |
| H-2718 | Switch Bracket-Cable Clamp Fastening Screw (3) | P-2160 | Right Slide Stop Lever |
| H-2722 | Resistor Mounting Screw | P-2161 | Slide Spacing Washer (4) |
| H-2723 | Cable Clamp Fastening Screw (4) | P-2163 | Front Slide Stop Screw (2) |
| H-2724 | Terminal Strip Fastening Screw (16) | P-2164 | Rear Slide Stop Screw (2) |
| H-3240 | Switch Bracket-Cable Clamp-Resistor Fastening Nut (5) | P-2165 | Chassis Pivot Screw (2) |
| H-3243 | Switch Dial Plate Fastening Nut | P-2167 | Stop Lever Fastening Screw (2) |
| H-3255 | Slide-Pivot Screw Fastening Nut (6) | P-2177 | Switch Mounting Bracket |
| H-3419 | Switch Lockwasher | P-2179 | Selector Switch |
| P-1066 | Amplifier-Network-Power Unit Cable Clamp (4) | P-2180 | Resistor, 60 ohms, 25 watt |
| P-1145 | Switch Bracket-Cable Clamp-Resistor Lockwasher (4) | P-2182 | Switch Dial Plate |
| P-1146 | Terminal Strip Lockwasher (16) | P-2183 | Switch Knob |
| P-1238 | Slide-Pivot Screw Lockwasher (6) | P-2185 | Switch Dial Plate Bushing |
| P-1280 | Switch Lockwasher | P-2187 | Resistor Washer |
| P-21066 | Amplifier-Network-Power Unit Cable Clamp (4) | P-2236 | Chassis Pivot Screw Spacing Washer (2) |
| P-21145 | Switch Bracket-Cable Clamp-Resistor Lockwasher (4) | P-2278 | Left Slide Stop Lever |
| P-21146 | Terminal Strip Lockwasher (16) | P-2279 | Cabinet Brace |
| P-21238 | Slide-Pivot Screw Lockwasher (6) | P-2314 | Terminal Strip Clamp (8) |
| P-21280 | Switch Lockwasher | P-2624 | Apparatus Blank (2) |
| P-218248 | Switch Cable Clamp | P-8248 | Switch Cable Clamp |