

Film-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.


These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.

If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

www.film-tech.com

PAD ROLLER ADJUSTMENT FOR PRO-35

THE PAD ROLLERS ON THE PRO-35 ARE ADJUSTABLE ON A HORIZONTAL PLANE AS WELL AS TO AND FROM THE SPROCKET. THE ROLLERS SHOULD JUST CONTACT 2 THICKNESS OF FILM HELD TIGHTLY AROUND THE SPROCKET, FOR PROPER SPACING.

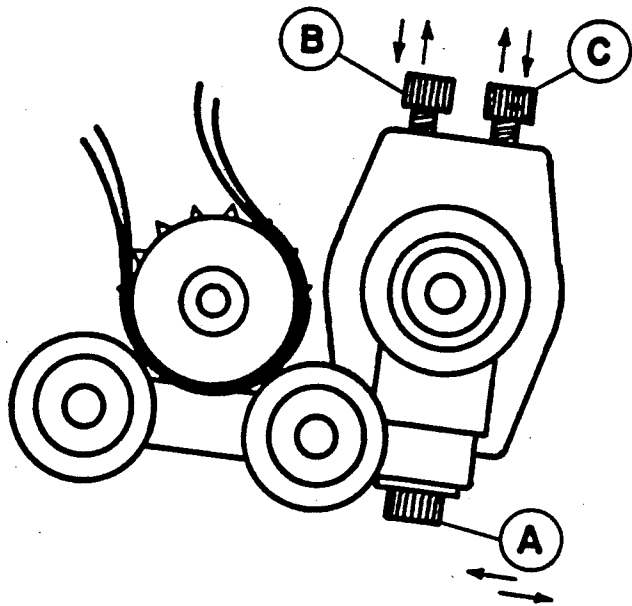

TURN ALLEN CAP SCREWS B & C IN OPPOSITE DIRECTIONS FOR ADJUSTMENT ↓ ↑ TO AND FROM SPROCKET.

LOOSEN SCREW (A) FOR ADJUSTMENT ⇌ TO CENTER ROLLERS ON SPROCKET.

THE SAME PROCEDURE IS FOLLOWED FOR THE LOWER SPROCKET. NOTE SCREW (A) IS ON TOP - (B) (C) ON BOTTOM OF LOWER CASTING.

MAKE CERTAIN ROLLER TURNS FREELY & IS CENTERED ON SPROCKET

