FILM-TECH

THE INFORMATION CONTAINED IN THIS ADOBE ACROBAT PDF FILE IS PROVIDED AT YOUR OWN RISK AND GOOD JUDGMENT.

THESE MANUALS ARE DESIGNED TO FACILITATE THE EXCHANGE OF INFORMATION RELATED TO CINEMA PROJECTION AND FILM HANDLING, WITH NO WARRANTIES NOR OBLIGATIONS FROM THE AUTHORS, FOR QUALIFIED FIELD SERVICE ENGINEERS.

IF YOU ARE NOT A QUALIFIED TECHNICIAN, PLEASE MAKE NO ADJUSTMENTS TO ANYTHING YOU MAY READ ABOUT IN THESE ADOBE MANUAL DOWNLOADS.

WWW.FILM-TECH.COM

KELMAR Systems Inc., 284 Broadway, Huntington Station, NY 11746 • 631.421.1230 • FAX 631.421.1274

Turret Control Module Instructions

Termination Schedule:

- Terminal #1 Flat Command Switch
 - #2 Command Switch Common
 - #3 Scope Command Switch
 - #4 N/C
 - #5 Masking Common –
 - #6 Masking Scope
 - #7 Masking Common ———
 - #8 Masking Flat
 - #9 Aperture Motor (+) Red
 - #10 " " (-) Black
 - #11 Turret Motor (+) Red
 - #12 " " (-) Black
 - #13 N/C
 - #14 120 Vac Line In
 - #15 N/C
 - #16 120 Vac Neutral
 - #17 N/C
 - #18 Chassis Ground

Potentiometer Schedule:

- R1 Flat Command Time Duration
- R26 Scope Command Time Duration
- R18 Aperture Motor Current Limiter Adjust
- R19 Aperture Motor Voltage Adjust

Adjustments

Before beginning turn all pots to the full CCW off position. All adjustments are to be done with both FLAT and SCOPE lens installed in the Turret Assembly.

<u>#1 R1 Flat Command Time Duration:</u>

Cycle the Turret to the Scope position, turn Pot R1 1/4 rotation. Now cycle the Turret to the Flat position, after the Turret completes its rotation the motor should overtravel for about 1/4 of a second to assure proper indexing. If insufficient travel occurs adjust R1 accordingly CW for longer time duration, CCW for shorter time duration.



<u>#2 R26 Scope Command Time Duration:</u>

This adjustment is achieved the same as the Flat except that R26 is the adjusting potentiometer.

After Lens travel has been set proceed to the next two adjustments.

#3 R19 Aperture Motor Voltages:

Adjust this Pot so that the Aperture Plate meets its stop the same time that the lens meets its stop.

<u>#4 R18 Aperture Motor Current Limiter:</u>

Adjust this Pot so that when the Aperture Plate meets its stop the motor will rest as the turret is still overtraveling.

If further assistance is required contact:

Kelmar Systems Inc. 284 Broadway Huntington Station, N.Y. 11746 Phone (631) 692-6131 Fax (631)421-1274





Page 3





