## Film-Tech

The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manual s are designed to facil itate the exchange of information rel ated to cinema projection and film handling, with no warranties nor obligations from the authors, for qual ified field service engineers.

If you are not a qual ified technician, pl ease make no adjuatments to anything you may read about in these Adobe manual downloads

www.film-tech.com

## EX520 Cinema Regulated Exciter Lamp Supply Hookup Instructions

The EX520 regulated exciter lamp supply uses the reliable SMART model 5100 switching supply module mounted on the rear of the chassis. The module quickly disconnects by releasing the screws and unplugging the main cable without having to remove the top cover. The regulated output may be adjusted for a wide range of both foreign and domestic exciter lamps by turning the multi-turn pot that controls the output. The operating range is from 4.5 VDC to 10 VDC.

The backup DC supply (unregulated) is set for domestic bulbs when shipped from the factory. The output is about 8 VDC (depending on the operating line voltage). To change the backup to 5 VDC for imported bulbs, remove the top cover. Locate the connector that has a brown wire. Unplug the Black/White wire from the connector and insert the gray wire into the connector.

The exciter lamp should be connected to the OUTPUT terminals on the main chassis. Do not use the LAMP output on the 5100 module or the operator cannot switch to backup from the front panel emergency switch.

The KILL terminals will decrease the regulated output to a low enough voltage to keep the filament of the bulb warm. This extends bulb life by not subjecting a cold bulb to high current during turn-on. Shorting the KILL terminals will put the regulated switching supply into a low voltage mode. Make sure you use a dry contract switching to avoid damage to the KILL circuit.

