

Film-Tech


The information contained in this Adobe Acrobat pdf file is provided at your own risk and good judgment.

These manuals are designed to facilitate the exchange of information related to cinema projection and film handling, with no warranties nor obligations from the authors, for qualified field service engineers.


If you are not a qualified technician, please make no adjustments to anything you may read about in these Adobe manual downloads.

www.film-tech.com

TIMING SHUTTER

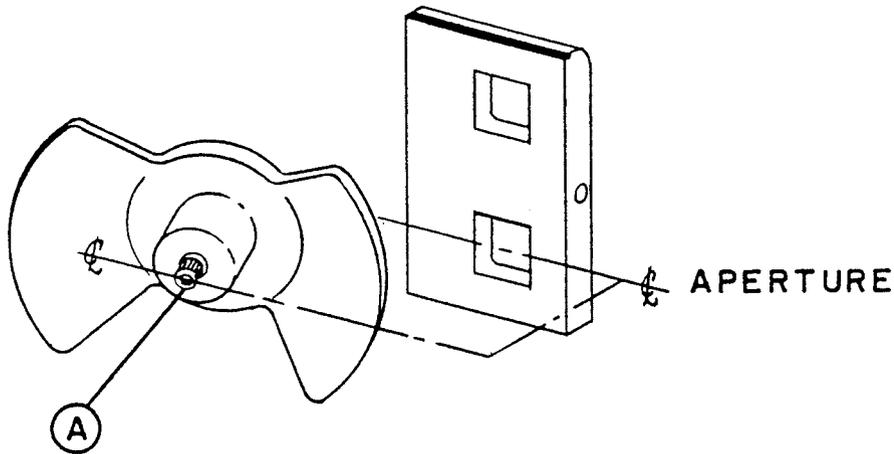

TURN PROJECTOR FORWARD BY MOTOR FLYWHEEL UNTIL SPROCKET TOOTH #2 IS AT INDICATOR. LOOSEN SCREW (A) AND TURN SHUTTER SO \mathcal{C} OF BLADE IS ON \mathcal{C} OF APERTURE OPENING.

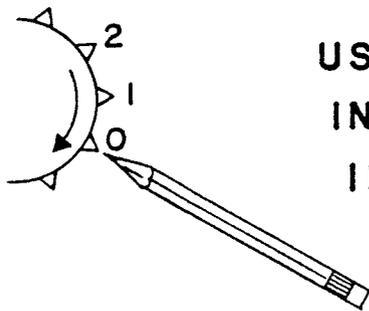

USE A POINTED OBJECT TO INDICATE POSITION OF INTERMITTENT TOOTH WHEN IN STOPPED POSITION.