FILM-TECH

THE INFORMATION CONTAINED IN THIS ADOBE ACROBAT PDF FILE IS PROVIDED AT YOUR OWN RISK AND GOOD JUDGMENT.

THESE MANUALS ARE DESIGNED TO FACILITATE THE EXCHANGE OF INFORMATION RELATED TO CINEMA PROJECTION AND FILM HANDLING, WITH NO WARRANTIES NOR OBLIGATIONS FROM THE AUTHORS, FOR QUALIFIED FIELD SERVICE ENGINEERS.

IF YOU ARE NOT A QUALIFIED TECHNICIAN, PLEASE MAKE NO ADJUSTMENTS TO ANYTHING YOU MAY READ ABOUT IN THESE ADOBE MANUAL DOWNLOADS.

WWW.FILM-TECH.COM


16 X 24 ISO Portframe Installation Instructions

Please review instructions before installing this product


Step 1: Make sure all mounting surfaces are clean and free of Dust.

Step 2: Apply a bead of sealant to the mounting flange gasket on the Auditorium Frame Half. THIS ADDS ADDITIONAL INTEGRITY TO THE SEAL (SEE DETAIL #1)



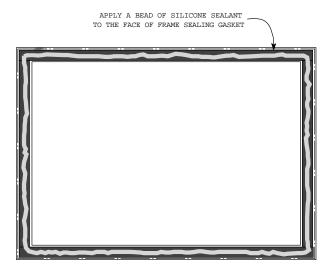

Step 3: Mount the Auditorium Frame Half. (SEE DETAIL #2)

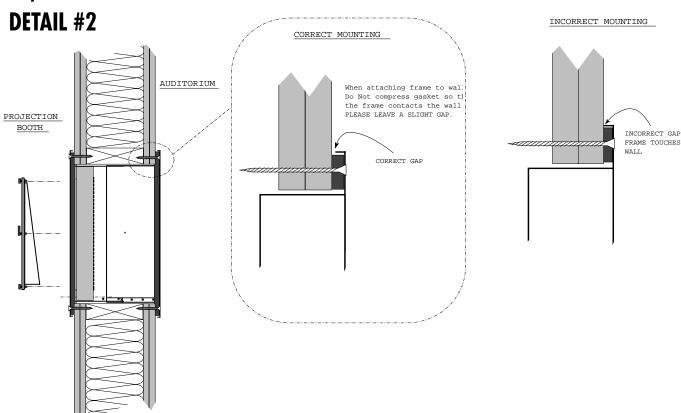




Step 4: Apply a bead of Silicone Based Caulks to the mounting flange gasket on the Projection Room Frame Half. THIS ADDS ADDITIONAL INTEGRITY TO THE SEAL

Step 5: Mount the Projection Room Frame Half. (SEE DETAIL #2)

Step 6: After both frames have been secured to the wall, take (4) #8 Self-tapping screws and use them to fasten the Two frames halves together. (SEE DETAIL #3)

Step 7: After both frames have been secured to per step 5. Seal the Mating Joint of the Two Frame Halves with a Silicone Based Caulk, THIS ADDS ADDITIONAL INTEGRITY TO THE SEAL. (SEE DETAIL #3)

DETAIL #3

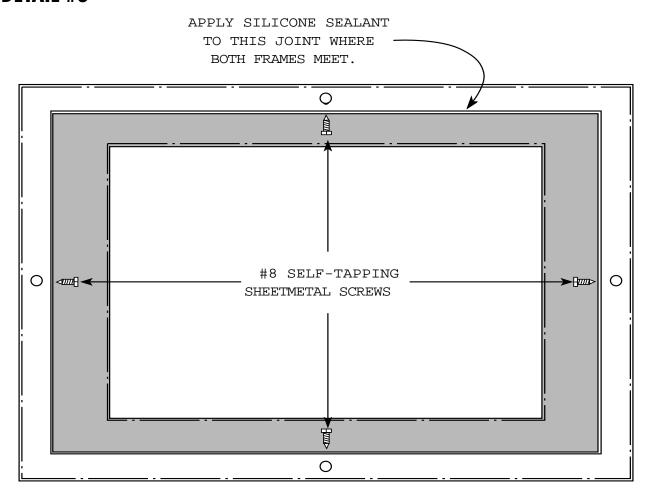

AS VIEWED FROM AUDITORIUM



